



K56 Hardware Kit Includes:

- #10-24 Drywall Toggle (6) 900-01024
 - #10-24x2.5" Machine Screw (6) 900-01023
 - #10 Wall Anchor (6) 900-01028
 - #10x1.5" Sheet Metal Screw (6) 900-01029
- Mounting Template

Materials/Tools Required:

- Level / Pencil / Hammer
- Masking Tape
- Tape Measure
- Drill with 7/32" bit or 1/2" bit (see Step 2)
- Phillips Head bit

Recommended Cleaning Materials:

- Lint Free Cloth or Wipes
- Fantastik® All-Purpose Heavy Duty Cleaner


Important Installation Guidelines:

1. Clearance space required above Message Board of same height or greater than model's height to allow for removal of lens and insert.

K56 - Message Boards (WZ)

Step 1:

Tape template on wall at desired location, using a level to ensure template is level/plumb.

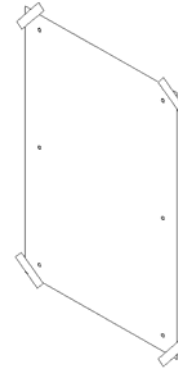

Step 2:


At hole center marks in template, drill holes using method A or B, depending on wall conditions as noted below:

- A. For concrete/masonry installation, the recommended mounting hardware is a wall anchor. Drill 7/32" diameter holes. Install anchors per Step 3a.
- B. For drywall installation, the recommended mounting hardware is a drywall toggle. Drill 1/2" diameter holes and deburr them. Insert toggles per Step 3b.




Step 3a: Wall Anchors

Drive anchors into masonry wall and seat flush. Proceed to Step 4.

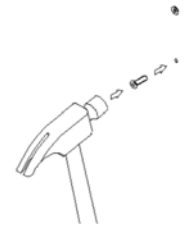

Step 3b: Drywall Toggles

Insert toggles into holes. Cinch retaining ring until tight against wall and seated in each hole. Break off excess plastic. Proceed to Step 4.

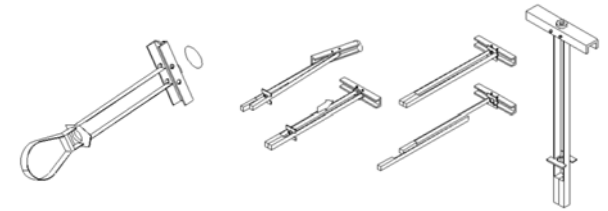


Step 4:

Remove lens and insert to expose mounting holes in bracket.



Step 5:

Attach Message Board to wall using #10 flat head screws as shown below. (machine screws if using drywall toggles, sheet metal screws if using wall anchors).

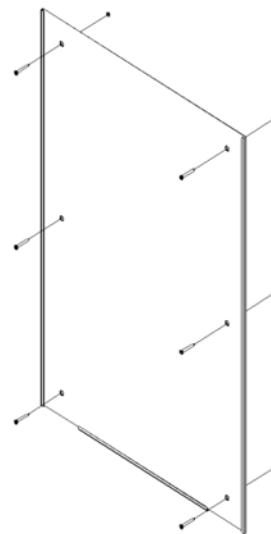

Step 6:

Slide lens and insert back in bracket. Remove finger prints from sign faces and edges using recommended cleaners. DO NOT use ammonia or alcohol based cleaners.

